

RSM2000 LED Codes.

Controller LED Codes.

Hex	LED Pattern	Meaning
	<div style="display: flex; justify-content: space-around; width: 100px;"> 1 2 </div>	
00		Active, no fault.
80		
	} Alternating	
6E		Passive, no fault
EE		
	} Alternating	
FF		Ctrl held in reset state
EA		Ctrl in wrong slot
36		Processor SIMM fault
00		
	} Alternating	
37		Data Cache SIMM fault
00		
	} Alternating	

Notes :

All other LED codes may be taken to indicate a Controller Module fault.

LED 1 indicates a controller fault.

LED 2 indicates power to the controller.

Front Panel LED Codes.

- Power On
- PSU Fault
- Fan Fault
- Controller Fault
- Data Cache Active

Disk Tray LED Codes.

- Power On
- PSU A Fault
- PSU B Fail
- Fan Warning
- Fan Fault
- Over Temperature
- Audible alarm reset switch

Other Modules :

Controller PSU's have a single green "power on" LED each.

PSU Fan module has a green "power on" LED and an amber "fault" LED.