



BlackDiamond Hardware Installation Guide

Extreme Networks, Inc.

10460 Bandley Drive

Cupertino, California 95014

(888) 257-3000

<http://www.extremenetworks.com>


Published: September 1998

Part number: 121000-00 Rev. A

Copyright © **Extreme Networks, Inc., 1998**. All rights reserved. No part of this documentation may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation, or adaptation) without permission from Extreme Networks, Inc.

Extreme Networks, ExtremeWare, BlackDiamond, Summit, SummitLink, ExtremeWare Vista, Summit Virtual Chassis, and the Extreme Networks logo are trademarks of Extreme Networks.

PACE is a trademark of 3Com Corporation. 3Com is a registered trademark of 3Com Corporation. All other brand and product names are registered trademarks or trademarks of their respective holders.

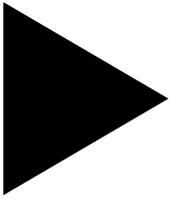

Contents

PREFACE

Introduction	ix
Conventions	x
Related Publications	xi

1 BLACKDIAMOND OVERVIEW

Summary of Features	1-1
Port Connections	1-2
Media Types and Distances	1-3
Full-Duplex	1-4
Network Configuration Example	1-4
BlackDiamond 6800 Components	1-6
BlackDiamond 6800 Power Supply	1-8
Power Supply LEDs	1-8
Management Switch Fabric Modules (MSMs)	1-9
MSM Behavior	1-10
MSM Memory	1-10
MSM LEDs	1-12
I/O Module Cards	1-12
G4X and G6X Modules	1-13
F32T Module	1-14
F32F Module	1-15
I/O Module LEDs	1-16
BlackDiamond 6800 Rear View	1-16
BlackDiamond6800 Fan Tray	1-18

2 INSTALLATION AND SETUP

- Following Safety Information 2-1
- Determining the System Location 2-2
- Installing the BlackDiamond 2-2
- Powering On the System 2-7
- Checking the Installation 2-7
- Connecting Equipment to the Console Port 2-8
- Logging In for the First Time 2-10

3 SERVICE AND MAINTENANCE


- Following Safety Information 3-1
- Removing and Replacing a Module Card 3-2
- Removing and Replacing a Power Supply 3-3
- Removing and Replacing the Fan Tray 3-4
- Adding and Removing DIMMs 3-5
- Adding and Removing GBICs 3-6

A SAFETY INFORMATION

- Important Safety Information A-1
 - Power A-2
 - Power Cord A-2
 - Connections A-3
 - Lithium Battery A-3


B TECHNICAL SPECIFICATIONS

INDEX

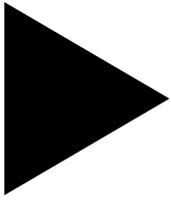


Figures

- 1-1** BlackDiamond network configuration example 1-5
- 1-2** BlackDiamond 6800 1-7
- 1-3** Management Switch Fabric Module (MSM) 1-9
- 1-4** MSM DIMM sockets 1-11
- 1-5** G4X module and G6X module 1-13
- 1-6** F32T module 1-14
- 1-7** F32F module 1-15
- 1-8** BlackDiamond 6800 rear view 1-17
- 2-1** Rack-mount helper bracket 2-3
- 2-2** BlackDiamond chassis mounted in rack 2-4
- 2-3** Power supply bays 2-5
- 2-4** MSM with extended ejector/injector handles 2-6
- 2-5** Null-modem cable pinouts 2-9
- 2-6** PC-AT serial null-modem cable pinouts 2-10
- 3-1** BlackDiamond power supplies 3-3
- 3-2** Removing the fan tray 3-4
- 3-3** Adding a DIMM 3-5
- 3-4** GBIC connectors 3-6

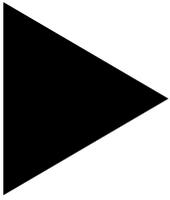

Tables

1	Notice Icons	x
2	Text Conventions	x
1-1	Media Types and Distances	1-3
1-2	Power Supply LEDs	1-8
1-3	MSM DIMM Memory Combinations	1-11
1-4	MSM LEDs	1-12
1-5	I/O Module LEDs	1-16
2-1	Console Connector Pinouts	2-9

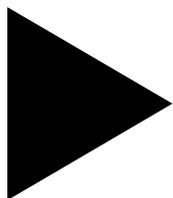

Preface

This Preface provides an overview of this guide, describes guide conventions, and lists other publications that may be useful.

INTRODUCTION

This guide provides the required information to install the BlackDiamond™ system.

This guide is intended for use by network administrators who are responsible for installing and setting up network equipment. It assumes a basic working knowledge of

- Local Area Networks (LANs)
- Ethernet concepts
- Ethernet switching and bridging concepts
- Routing concepts
- Simple Network Management Protocol (SNMP)

For information on configuring the BlackDiamond system, refer to the *BlackDiamond User Guide*.



If the information in the “Release Notes” shipped with your switch differs from the information in this guide, follow the “Release Notes.”

CONVENTIONS

[Table 1](#) and [Table 2](#) list conventions used throughout this guide.

Table 1: Notice Icons

Icon	Notice Type	Alerts you to...
	Note	Important features or instructions.
	Caution	Risk of personal injury, system damage, or loss of data.
	Warning	Risk of severe personal injury.

Table 2: Text Conventions

Convention	Description
Screen displays	This typeface represents information as it appears on the screen, or command syntax.
Screen displays bold	This typeface represents commands that you type.
The words “enter” and “type”	When you see the word “enter” in this guide, you must type something, and then press the Return or Enter key. Do not press the Return or Enter key when an instruction simply says “type.”
[Key] names	Key names appear in text in one of two ways: <ul style="list-style-type: none"> ■ Referred to by their labels, such as “the Return key” or “the Escape key” ■ Written with brackets, such as [Return] or [Esc] If you must press two or more keys simultaneously, the key names are linked with a plus sign (+). Example: Press [Ctrl]+[Alt]+[Del].
Words in <i>italicized</i> type	Italics emphasize a point or denote new terms at the place where they are defined in the text.

RELATED PUBLICATIONS

The BlackDiamond documentation set includes the following:

- *BlackDiamond User Guide*
- *BlackDiamond Quick Reference Guide*
- BlackDiamond “Release Notes”

Documentation for Extreme Networks products is available on the World Wide Web at the following location:

- Extreme Networks home page <http://www.extremenetworks.com/>

1

BlackDiamond Overview

The BlackDiamond 6800 is a chassis-based system designed to be placed in the core of your network. The BlackDiamond system is flexible and scalable, making it easy for you to meet the changing requirements of your network. The combination of BlackDiamond systems and Summit switches delivers a consistent end-to-end network solution that provides nonblocking architecture, wire-speed switching, wire-speed IP routing, and policy-based Quality of Service (QoS).

This chapter describes the following:

- BlackDiamond 6800 features
- Network configurations using the BlackDiamond 6800
- BlackDiamond 6800 components

SUMMARY OF FEATURES

The features of the BlackDiamond 6800 include the following:

- A 10-slot chassis that can be populated with up to 8 input/output (I/O) modules and two Management Switch Fabric Modules (MSMs)
- I/O modules and MSMs are hot-swappable, and include Gigabit Ethernet or 10/100 Mbps Ethernet ports
- Redundant, load-sharing, hot-swappable power supplies
- Field-replaceable, hot-swappable fan tray
- Up to 256 switched 10/100 Mbps Ethernet ports

- Up to 48 switched Gigabit Ethernet ports
- Fully nonblocking operation
 - All ports transmit and receive packets at wire speed
- Autonegotiation for half- or full-duplex operation on 10/100 Mbps ports
- Load-sharing on multiple ports
- Virtual local area networks (VLANs), including support for IEEE 802.1Q
- Spanning Tree Protocol (STP) (IEEE 802.1D) with multiple STP domains
- Policy-based Quality of Service (QoS)
- Wire-speed Internet Protocol (IP) routing
- IP Multinetting
- Dynamic Host Configuration Protocol/Bootstrap Protocol (DHCP/BOOTP) Relay
- Routing Information Protocol (RIP) version 1 and RIP version 2
- Open Shortest Path First (OSPF) routing protocol
- Wire-speed IP multicast routing support
- Internet Group Multicast Protocol (IGMP) and IGMP snooping
- Distance Vector Multicast Routing protocol (DVMRP)
- IGMP snooping to control IP multicast traffic
- Console (RS-232) command-line interface (CLI) connection
- Telnet CLI connection
- ExtremeWare™ Vista™ Web-based management interface
- Simple Network Management Protocol (SNMP) support

PORT CONNECTIONS

The BlackDiamond 6800 supports the following I/O modules:

- G4X module

The G4X module has four Gigabit Ethernet ports, using standard Gigabit Interface Connectors (GBICs). The G4X module supports 1000BASE-SX and 1000BASE-LX.
- G6X module

The G6X module has six Gigabit Ethernet ports, using standard Gigabit Interface Connectors (GBICs). The G6X module supports 1000BASE-SX and 1000BASE-LX.

- F32T module

The F32T module has 32 10/100 Mbps autosensing Ethernet ports, using standard RJ-45 connectors. The F32T module supports 10BASE-T and 100BASE-TX.

- F32F module

The F32F module has 32 100 Mbps Ethernet ports, using standard MT-RJ connectors. The F32F module supports 100BASE-FX in full-duplex mode.



Modules that use SX, LX, and FX interfaces contain Class 1 laser devices. Invisible laser radiation can occur when open. Avoid direct eye exposure to beam.

MEDIA TYPES AND DISTANCES

[Table 1-1](#) describes the media types and distances for the different types of BlackDiamond 6800 ports.

Table 1-1: Media Types and Distances

Standard	Media Type	Mhz/Km Rating	Maximum Distance
1000BASE-SX	50/125um Multimode Fiber	400	500 Meters
	50/125um Multimode Fiber	500	550 Meters
	62.5/125um Multimode Fiber	160	220 Meters
	62.5/125um Multimode Fiber	200	275 Meters
1000BASE-LX	50/125um Multimode Fiber	400	550 Meters
	50/125um Multimode Fiber	500	550 Meters
	62.5/125um Multimode Fiber	500	550 Meters
	10u Single-mode Fiber		5,000 Meters
	10u Single-mode Fiber*		10,000 Meters
100BASE-FX	550/125um Multimode Fiber (full-duplex operation)		2,000 Meters
	52.5/125um Multimode Fiber (full-duplex operation)		2,000 Meters
100BASE-TX	Category 5 UTP Cable (100Mbps)		100 Meters
10BASE-T	Category 3 UTP Cable (10Mbps)		100 Meters

*EXTREME NETWORKS PROPRIETARY. CONNECTIONS BETWEEN TWO EXTREME NETWORKS 1000BASE-LX INTERFACES CAN USE A MAXIMUM DISTANCE OF 10,000 METERS.



For more information on 1000BASE-SX and 1000BASE-LX link characteristics, refer to IEEE Draft P802.3z/D5.0, Table 38-2 and Table 38-6.

FULL-DUPLEX

The BlackDiamond system provides full-duplex support for all ports. Full-duplex allows frames to be transmitted and received simultaneously and, in effect, doubles the bandwidth available on a link. All 10/100 Mbps ports on the BlackDiamond 6800 autonegotiate for half- or full-duplex operation.

NETWORK CONFIGURATION EXAMPLE

The BlackDiamond can be used as a core network switch, a segment switch, or a server switch. When used as a core network switch, the BlackDiamond performs collapsed-backbone routing and switching at wire-speed, allowing it to handle the growing influx of intranetwork and Internet traffic that travels between multiple networks.

When used as a high-density segment switch in the wiring closet, the BlackDiamond can aggregate the hierarchy of legacy hubs and switches that support desktop connections. When the BlackDiamond is used to perform segment switching at Layer 3, local traffic stays within the subnet and does not needlessly enter the core.

When used as a server switch, the BlackDiamond supports 10/100 Mbps segments and Gigabit Ethernet segments, handling traffic to and from servers in the data center. This application ensures sufficient bandwidth between servers and to segments. Conversely, the BlackDiamond can support Gigabit Ethernet segments and 10/100Mbps server links to optimize client-to-server traffic. Multiple 10, 100, and 1,000 Mbps switch ports can be trunked into one logical link between the data centers, the network cores, and high-performance servers.

[Figure 1-1](#) shows an example of the BlackDiamond used in a network configuration.

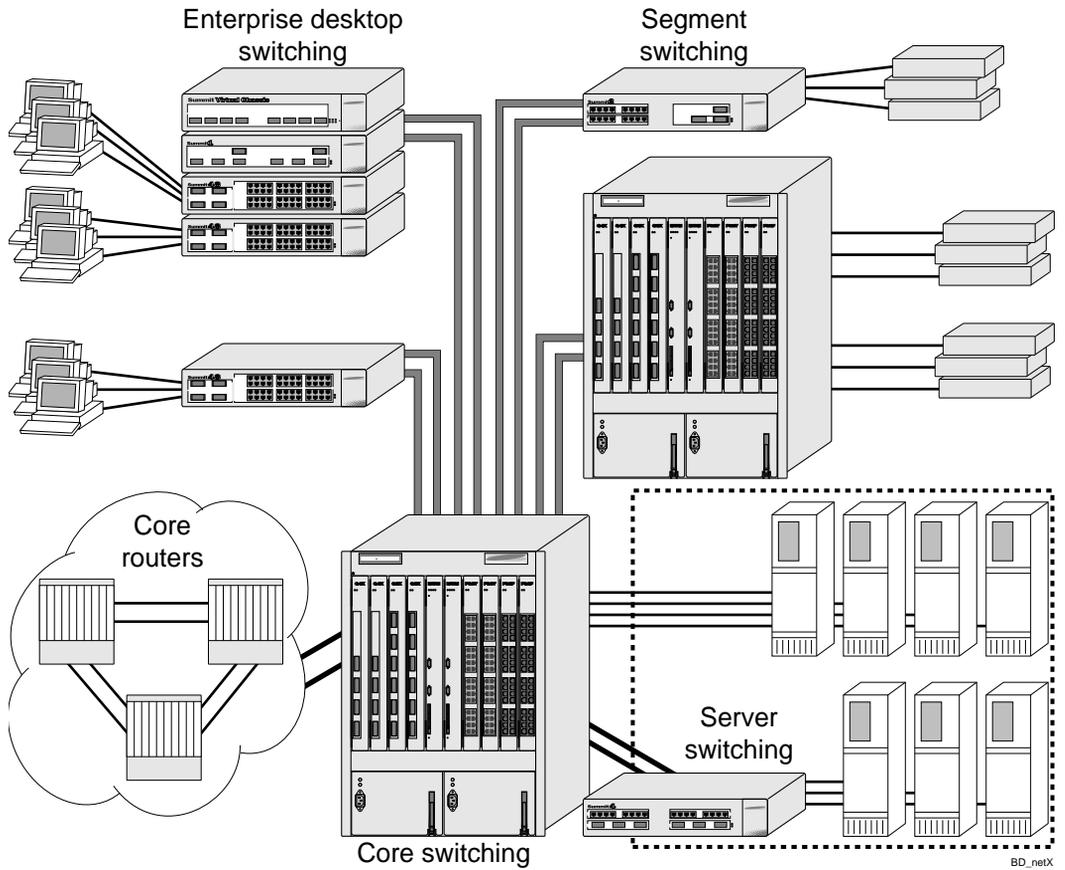


Figure 1-1: BlackDiamond network configuration example

BLACKDIAMOND 6800 COMPONENTS

The BlackDiamond 6800 system, shown in [Figure 1-2](#), consists of the following components:

- One 10-slot chassis with backplane
- Eight I/O module slots, labeled Slot 1 through Slot 8
- Two MSM module slots, labeled Slot A and Slot B
- Two power supplies
- One fan tray (accessed from the rear of the unit)
- One electromagnetic discharge (ESD) wrist strap receptacle

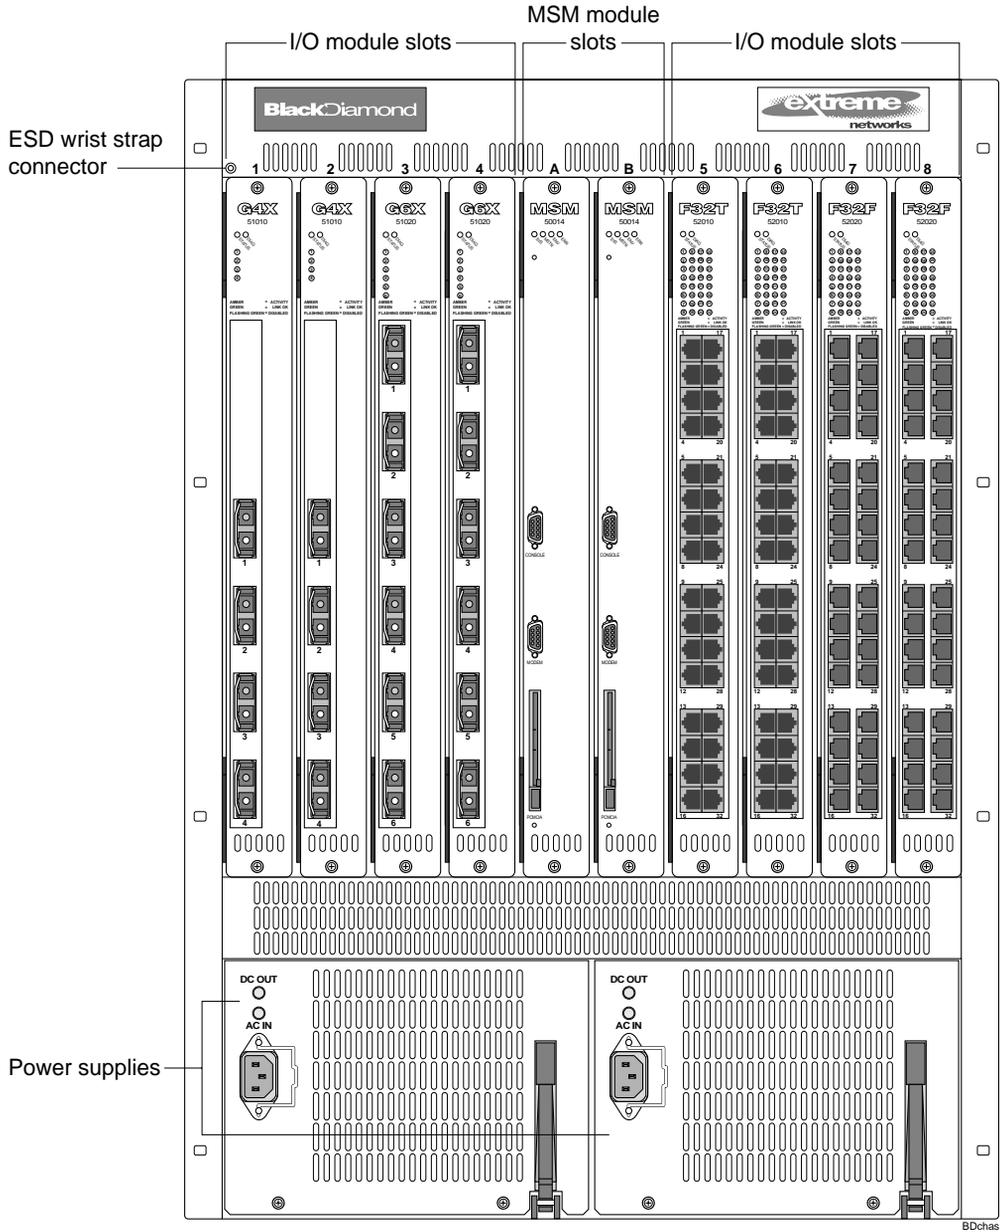


Figure 1-2: BlackDiamond 6800

BLACKDIAMOND 6800 POWER SUPPLY

The BlackDiamond 6800 can have one or two A/C power supplies that use 220V power. When two power supplies are present, the power is load-shared between the supplies for enhanced longevity. The power supplies are hot-swappable.

SNMP traps are sent when one of the following occurs:

- A/C power failure
- Power supply failure
- Power supply is removed

POWER SUPPLY LEDs

[Table 1-2](#) describes the light emitting diode (LED) behavior on the power supply.

Table 1-2: Power Supply LEDs

LED	Color	Indicates
A/C In	Green	Powered using 220V input
	Amber	Powered using 110V input
	Off	No power
D/C Out	Green	All D/C outputs are operational
	Amber	One or more D/C outputs have failed
	Off	No power

MANAGEMENT SWITCH FABRIC MODULES (MSMs)

The MSM is the internal switch fabric for data that is being sent between I/O modules. Each MSM has two CPUs for protocol processing, network management, and internal switch fabric for processing data traffic between I/O modules. Up to two MSMs can be installed in the BlackDiamond 6800 chassis for full redundancy. Using two MSMs, the capacity of the BlackDiamond 6800 is doubled, and the system runs faster. Packet throughput between I/O modules on the BlackDiamond 6800 is 32 Gbps when one MSM is used, and 64 Gbps when two MSMs are present.

The MSMs must be installed in the center slots of the BlackDiamond 6800 chassis, labeled Slot A and Slot B. [Figure 1-3](#) shows the MSM.

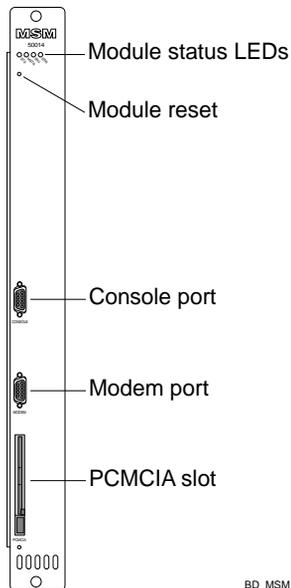


Figure 1-3: Management Switch Fabric Module (MSM)

The MSM has the following ports:

- Console port (used to connect a terminal and perform local out-of-band management)
- Modem port (used to connect a modem for remote access to the CLI)
- PCMCIA slot (for future development)

MSM BEHAVIOR

The BlackDiamond 6800 can run with a single MSM installed. When a second MSM is used, one of the MSMs is selected to be the *master MSM*, and the other becomes the *slave MSM*.

The master MSM is responsible for upper-layer protocol processing and system-management functions. For example, OSPF computation and SNMP functions are performed by the master MSM. Packet handling is distributed among the four CPUs on both MSMs.

Selection of the master MSM occurs automatically. The following scenarios describe the selection process:

- When the BlackDiamond 6800 boots with both MSMs already installed, the MSM in Slot A becomes the master.
- When the BlackDiamond 6800 boots with a single MSM (regardless of the slot), it is selected as the master. If another MSM is added to the system while powered on, the added MSM becomes the slave. The slave MSM can be inserted and de-inserted in the chassis without disruption of network services.

If you de-insert the master MSM while the BlackDiamond 6800 is running, the slave MSM does a soft reset and becomes the master MSM.

When you save the software configuration, it is saved to both MSMs. If you download a new image, the image is downloaded to both MSMs.

MSM MEMORY

The MSM has two 168-pin DIMM sockets, and ships with one 64MB SDRAM module installed, as shown in [Figure 1-4](#). In the future, the memory capacity will be increased by either replacing the 64 MB DIMM with a new one, or by adding a second DIMM to the empty socket.

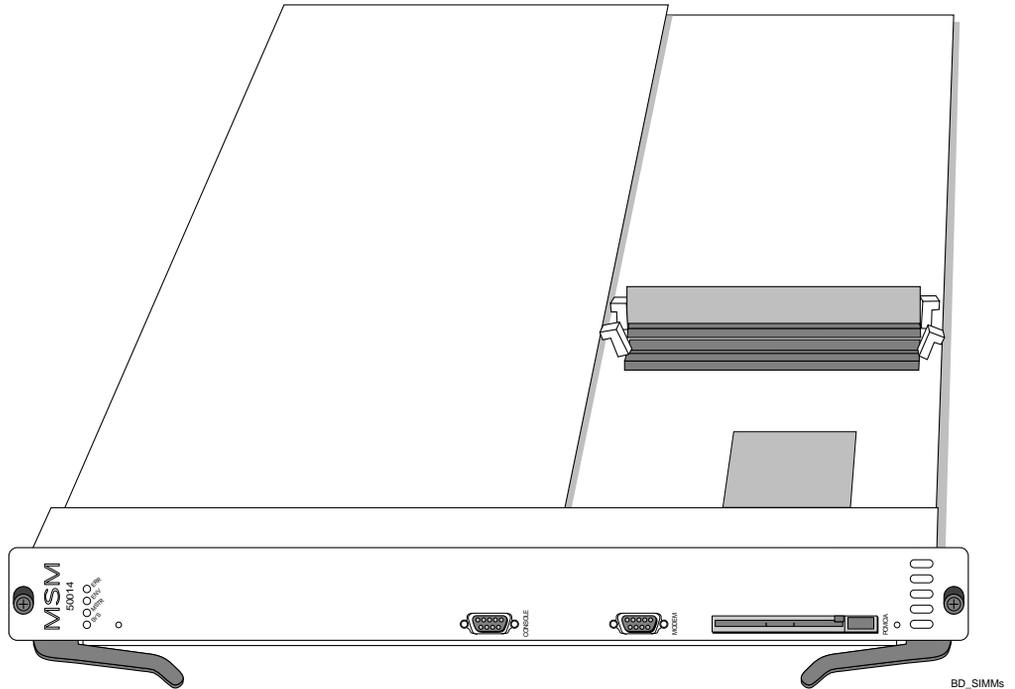


Figure 1-4: MSM DIMM sockets

For larger network configurations and larger routing tables, you can add an additional memory to the MSM. The MSM can be populated (using slots labelled J2 and J3 on the MSM) with any of the memory combinations described in [Table 1-3](#).

Table 1-3: MSM DIMM Memory Combinations

J2	J3	Total Memory
0	64 MB	64 MB
64 MB	64 MB	128 MB
0 MB	128 MB	128 MB
64 MB	128 MB	192 MB
128 MB	128 MB	256 MB

If you are using two MSMs, both MSMs must have the identical memory configuration.



For more information on adding or removing DIMMs, refer to [Chapter 3](#).

MSM LEDs

[Table 1-4](#) describes the LED behavior on the MSM.

Table 1-4: MSM LEDs

LED	Color	Indicates
SYS	Green (blinking)	Normal operation
	Amber (blinking)	Diagnostic test in progress
	Amber	Diagnostic failure
	Off	No power
MSTR	Green	Master MSM
	Amber	Slave MSM
ENV	Green	Environment (temperature, fan, power supply) is operating properly
	Amber	Environmental failure
ERR	Amber	Critical software error logged since power up
	Off	Normal operation

I/O MODULE CARDS

The BlackDiamond 6800 system has four I/O modules, as follows:

- G4X module
- G6X module
- F32T module
- F32F module

I/O modules can be inserted or de-inserted at any time, without causing disruption of network services. No configuration information is stored on the I/O module; all configuration information is stored on the MSM.

When the BlackDiamond 6800 is powered on, the system software generates a default configuration for any slots that are occupied with I/O modules. The default configuration allows the I/O module ports to participate in the VLAN *default*.

The default configuration for the I/O module is not preserved unless you explicitly save the information to nonvolatile RAM (NVRAM).

You can use the system software to configure the I/O module. You can also pre-configure the parameters of a module that has not yet been inserted into the chassis. The pre-configured information is used once the module is inserted. You must select a module type for the slot before you can pre-configure the parameters.



For information on configuring I/O modules, see the BlackDiamond User Guide.

G4X AND G6X MODULES

The G4X and G6X modules are shown in [Figure 1-5](#).

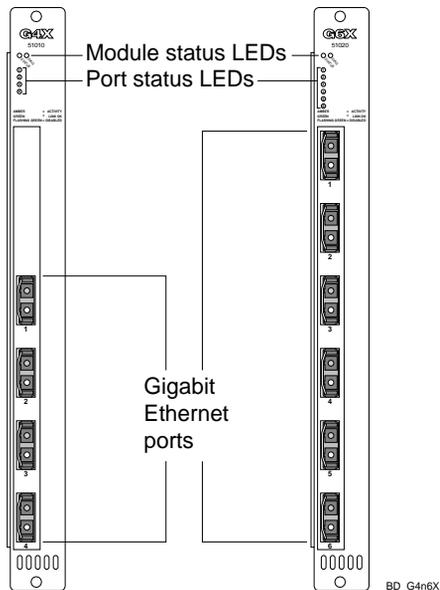


Figure 1-5: G4X module and G6X module

The G4X module has four Gigabit Ethernet ports. The G6X module has six Gigabit Ethernet ports.

All Gigabit Ethernet ports on these modules use standard GBIC connectors and support 1000BASE-SX and 1000BASE-LX. The default configuration of the G4X and G6X modules is as follows:

- All ports are added to the *default* VLAN as untagged.
- All ports inherit the properties of the *default* VLAN (for example, protocol type, VLANid, and so on).
- All ports are in auto-negotiation mode.

For supported media types and distances, refer to [Table 1-1](#).

F32T MODULE

The F32T module, shown in [Figure 1-6](#), has 32 10/100 Mbps Ethernet ports.

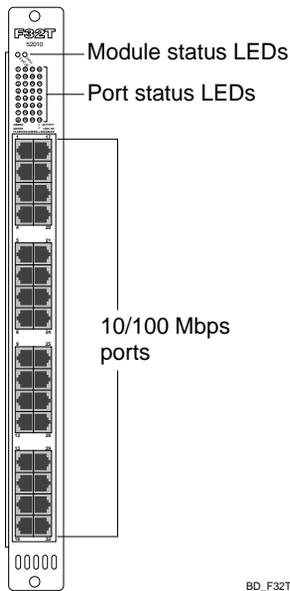


Figure 1-6: F32T module

All F32T ports use standard RJ-45 connectors and support 10BASE-T and 100BASE-TX. The default configuration of the F32T module is as follows:

- All ports are added to the *default* VLAN as untagged.
- All ports inherit the properties of the *default* VLAN (protocol type, VLANid, and so on).
- All ports are in auto-negotiation mode allowing 10 Mbps, 100 Mbps, full-duplex, or half-duplex operation.

F32F MODULE

The F32F module, shown in [Figure 1-7](#), has 32 100 Mbps Ethernet ports.

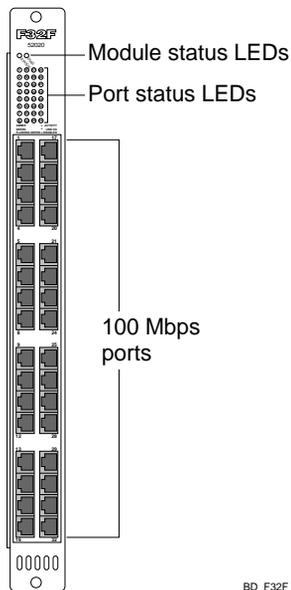


Figure 1-7: F32F module

All F32F ports use standard MT-RJ connectors and support 100BASE-FX. The default configuration of the F32F module is as follows:

- All ports are added to the *default* VLAN as untagged.
- All ports inherit the properties of the *default* VLAN (protocol type, VLANid, and so on).
- All ports are in 100 Mbps, full-duplex mode.

I/O MODULE LEDs

Table 1-5 describes the LED behavior on the I/O modules.

Table 1-5: I/O Module LEDs


LED	Color	Indicates
Status	Green blinking	Normal operation
	Amber blinking	Configuration error, diagnostic failure, or other severe card error
	Off	No power
DIAG	Green	Normal operation
	Amber blinking	Diagnostics in progress
	Amber	Diagnostic failure
Port <i>x</i>	Green	Link up
	Amber	Packet activity
	Off	Link down

BLACKDIAMOND 6800 REAR VIEW

Figure 1-8 shows the rear view of the BlackDiamond 6800 switch.

The rear view of the BlackDiamond provides the following:

- Access to the fan tray
- The chassis serial number
- The device Ethernet MAC address

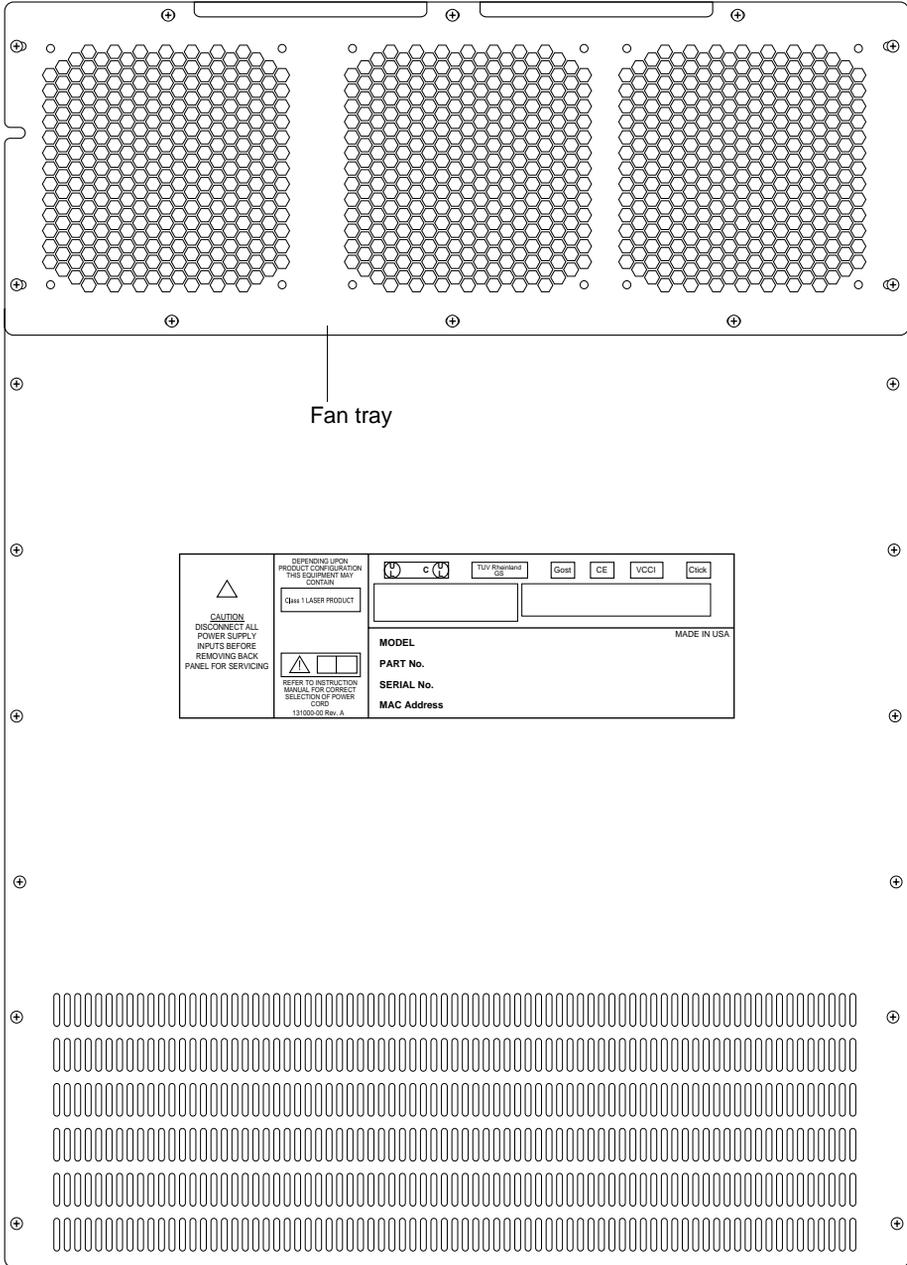

BD_rear

Figure 1-8: BlackDiamond 6800 rear view

BLACKDIAMOND6800 FAN TRAY

The fan tray contains three individual fans, accessed from the rear of the chassis. The fan status is monitored by the software for overheating conditions. All fan and temperature failures trigger management alerts (for example SNMP traps, SYSLOG messages, and so on). For more information on switch monitoring, refer to the *BlackDiamond User Guide*.



Do not cover or obstruct the fan ventilation holes at the rear of the unit. Doing so can result in an overheat condition and possible damage to the BlackDiamond system. Thermal sensors will shut down the BlackDiamond if the internal temperature exceeds 60 degrees Celsius.

2

Installation and Setup

This chapter describes the following:

- How to decide where to install the BlackDiamond
- How to install the chassis in a rack
- How to install the power supply
- How to install module cards in the chassis
- How to connect equipment to the console port
- How to check the installation using the Power On Self-Test (POST)

FOLLOWING SAFETY INFORMATION

All service to BlackDiamond modules, fan tray, and power supplies should be performed by trained service personnel, only.



Before installing or removing any components of the system, or before carrying out any maintenance procedures, you must read the safety information provided in [Appendix A](#) of this guide.

DETERMINING THE SYSTEM LOCATION

The BlackDiamond is suited for use in a wiring closet or equipment room, where it can be mounted in a standard 19-inch equipment rack. Mounting brackets are integrated with the chassis.

When deciding where to install the BlackDiamond, ensure that

- The system is accessible and cables can be connected easily.
- Water or moisture cannot enter the chassis.
- Air-flow around the unit and through the vents at the rear of the chassis is not restricted. A minimum of 3 inches is required (5 inches recommended) for clearance.
- Temperature operating limits of 0° to 40° C are not exceeded.

INSTALLING THE BLACKDIAMOND

The BlackDiamond can be mounted in a rack. The chassis is 15U high and fits in most standard 19-inch racks.

The BlackDiamond chassis is shipped empty; you must install the power supply and module cards after rack-mounting the empty chassis.



Rack-mount the chassis before installing any BlackDiamond components.

To install the BlackDiamond, follow these steps:

- 1 Mount the helper bracket in the rack using four appropriate rack-mounting screws, as shown in [Figure 2-1](#).

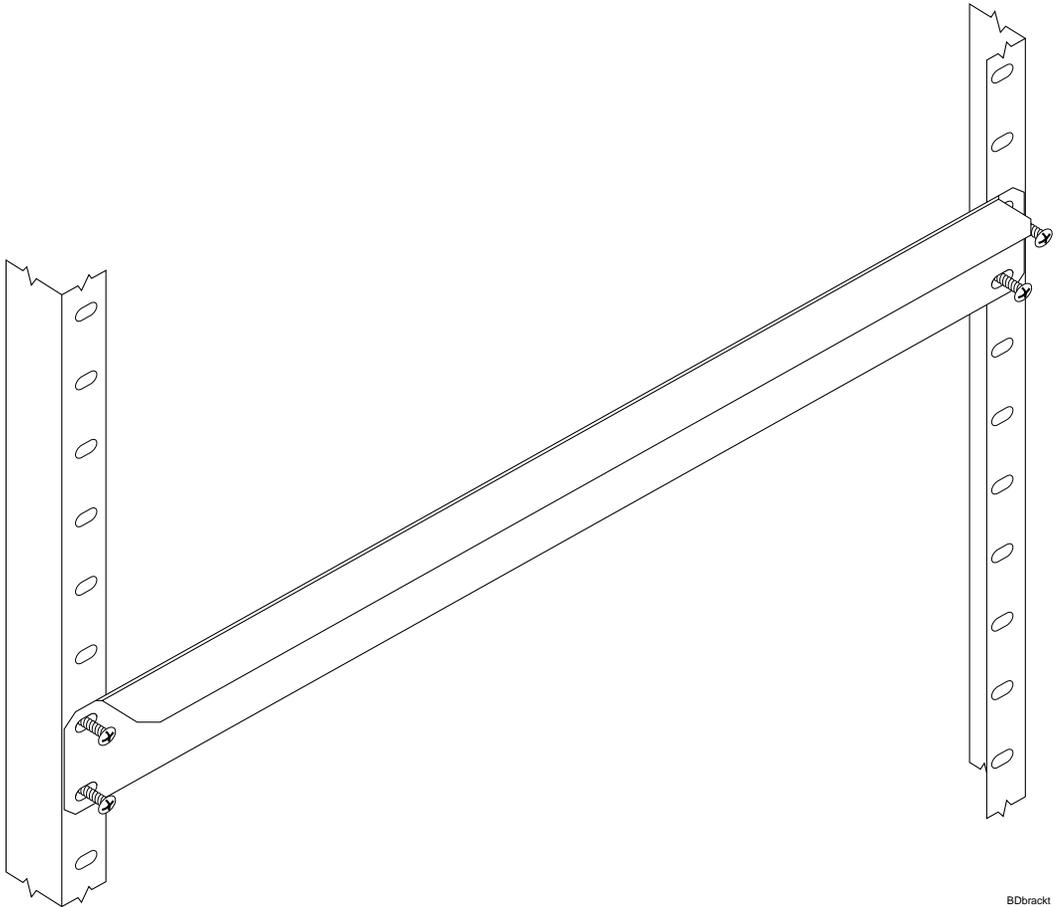


Figure 2-1: Rack-mount helper bracket

- 2** Insert the empty chassis into the 19-inch rack and place it on the helper bracket.
- 3** Secure the empty chassis with eight suitable screws, as shown in [Figure 2-2](#).


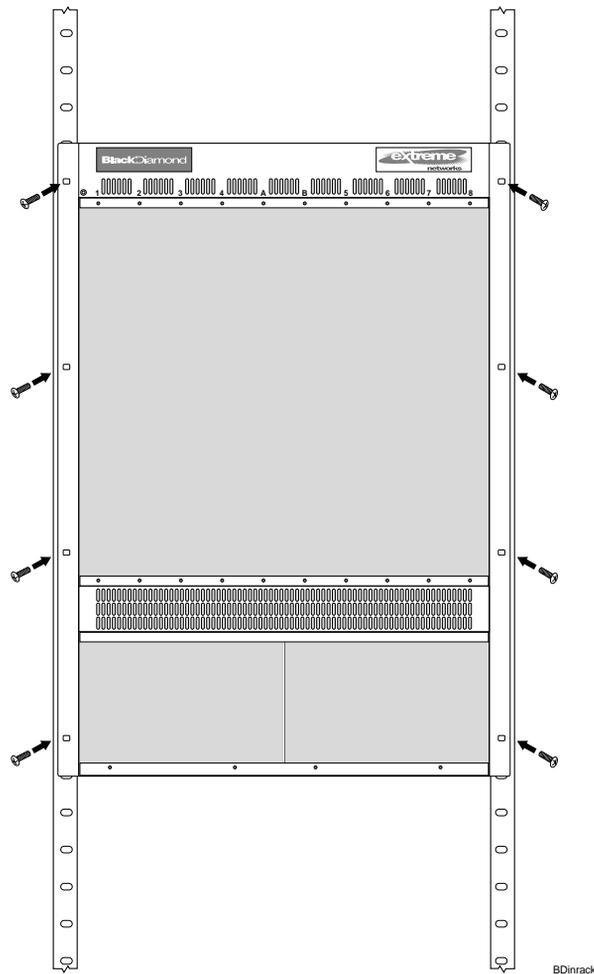


Figure 2-2: BlackDiamond chassis mounted in rack

- 4 Once the chassis is secured, remove the helper bracket.
- 5 Install the first power supply in an empty power supply bay by following these steps:
 - a Ensure that the power supply is right side up, and the locking handle is open.
 - b Slide the power supply into the bay.
 - c Secure the power supply by rotating the locking handle up until it clicks in place, and then tighten the screws using a #1 Phillips-head screwdriver.

- 6 To install a second power supply, remove the blank plate from the power supply bay on the right of the chassis using a #1 Phillips-head screwdriver.
- 7 Install the second power supply, as shown in [Figure 2-3](#), by repeating the procedure described in Step 5.

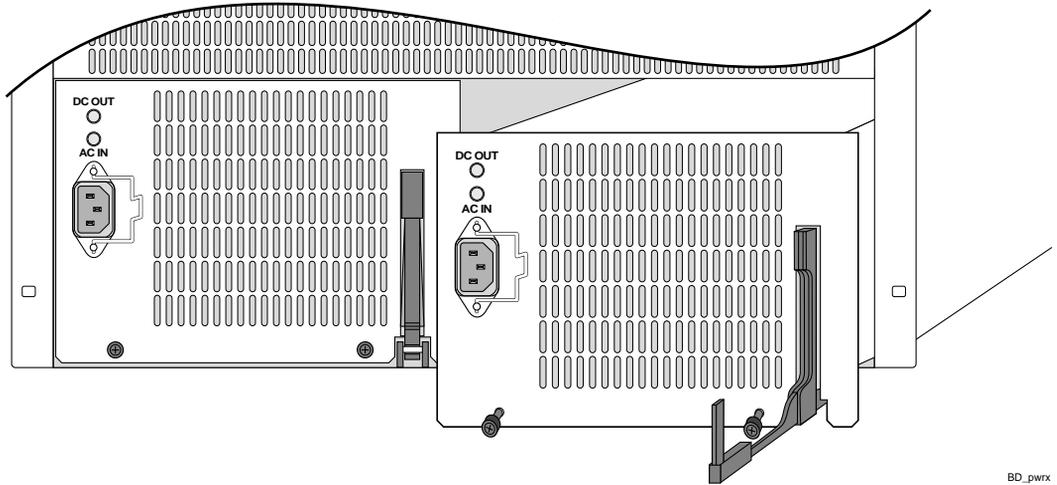

BD_pwrX

Figure 2-3: Power supply bays

- 8 Prior to installing module cards into the BlackDiamond chassis, put on the ESD wrist strap that is provided with the chassis, and connect the metal end to the ground receptacle located on the top-left corner of the BlackDiamond front panel.
- 9 To install the MSM follow these steps:
 - a Ensure that the MSM is right side up (printed circuit board, or PCB, to the right), the DIMM ejector locks are in the upright and locked position, and the ejector/injector handles are extended, as shown in [Figure 2-4](#).

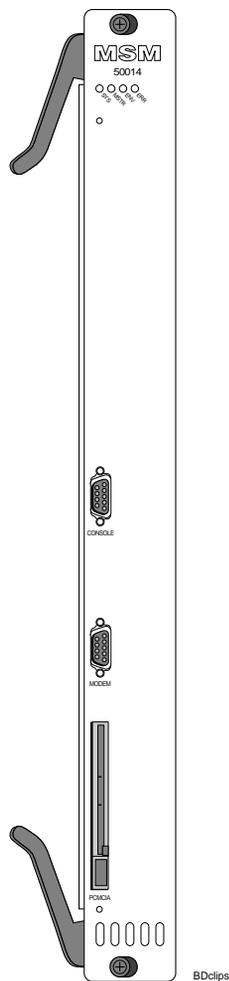


Figure 2-4: MSM with extended ejector/injector handles

- b** Slide the MSM into the appropriate slot of the chassis (Slot A or Slot B), until it is fully seated in the backplane.

i *Use the metal back panel, not the PCB to guide the MSM into the chassis. Ensure that the DIMM ejector locks are closed before inserting the MSM.*

When the MSM is fully seated in the chassis, the ejector/injector handles will begin to close.

- c To secure the MSM in the chassis, close the ejector/injector handles by pushing on them toward the center of the module card, and tighten the screws using a #1 Phillips-head screwdriver.
- d Repeat this procedure for the second MSM, if applicable.



The MSM can be installed in Slot A or Slot B only. The MSM does not fit in any other chassis slots. Forceful insertion will damage the MSM module or backplane connectors.

10 Install the I/O module by following these steps:

- a Ensure that the I/O module is right side up, and the ejector/injector handles are extended.
- b Slide the I/O module into the appropriate slot of the chassis (Slots 1 through 8), until it is fully seated in the backplane.

When the I/O module is fully seated in the chassis, the ejector/injector handles will begin to close.

- c To secure the module in the chassis, close the ejector/injector handles by pushing on them toward the center of the module card, and tighten the screws using a #1 Phillips-head screwdriver.
- d Repeat this procedure for the additional I/O modules, if applicable.



The I/O module can be installed in any of the slots labeled Slot 1 through Slot 8 only. The I/O module does not fit in Slot A or Slot B. Forceful insertion will damage the I/O module or backplane connectors

POWERING ON THE SYSTEM

To turn on power to the system, connect the AC power cable to the power supply and then to the wall outlet. If you have installed two power supplies, connect both power cables.

CHECKING THE INSTALLATION

After turning on power to the BlackDiamond, each MSM performs a power-on self test (POST) of its circuitry. The LED labeled “SYS” on the MSM blinks amber during the POST. Once the MSM is operational, each I/O module performs a POST.



For more information on the LEDs, refer to [Chapter 1](#).

CONNECTING EQUIPMENT TO THE CONSOLE PORT

Connection to the console port is used for direct local management. The console port settings are configured as follows:

- **Baud rate** — 9600
- **Data bits** — 8
- **Stop bit** — 1
- **Parity** — None
- **Flow control** — XON/XOFF


The terminal connected to the console port on the MSM must be configured with the same settings. This procedure will be described in the documentation supplied with the terminal.

Appropriate cables are available from your local supplier. To make your own cables, pinouts for a DB-9 male console connector are described in [Table 2-1](#).

Table 2-1: Console Connector Pinouts

Function	Pin Number	Direction
DCD (data carrier detect)	1	In
RXD (receive data)	2	In
TXD (transmit data)	3	Out
DTR (data terminal ready)	4	Out
GND (ground)	5	-
DSR (data set ready)	6	In
RTS (request to send)	7	Out
CTS (clear to send)	8	In

[Figure 2-5](#) shows the pinouts for a 9-pin to 25-pin (RS-232) null-modem cable.

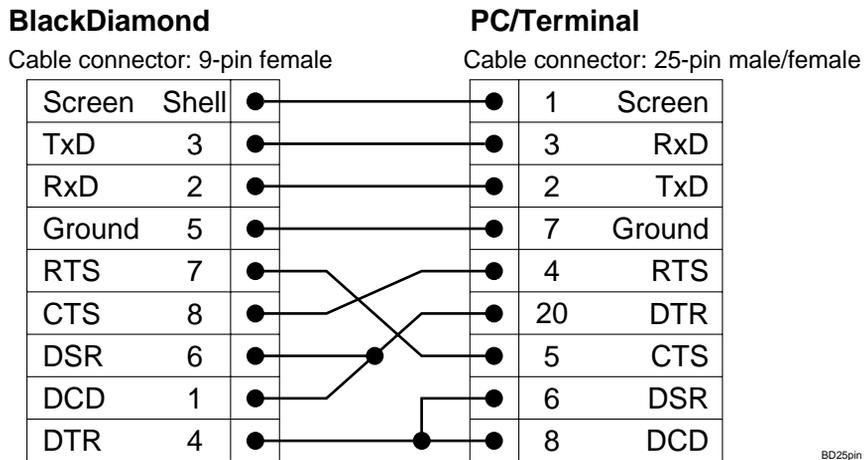

BD25pin

Figure 2-5: Null-modem cable pinouts

Figure 2-6 shows the pinouts for a 9-pin to 9-pin (PC-AT) null-modem serial cable.

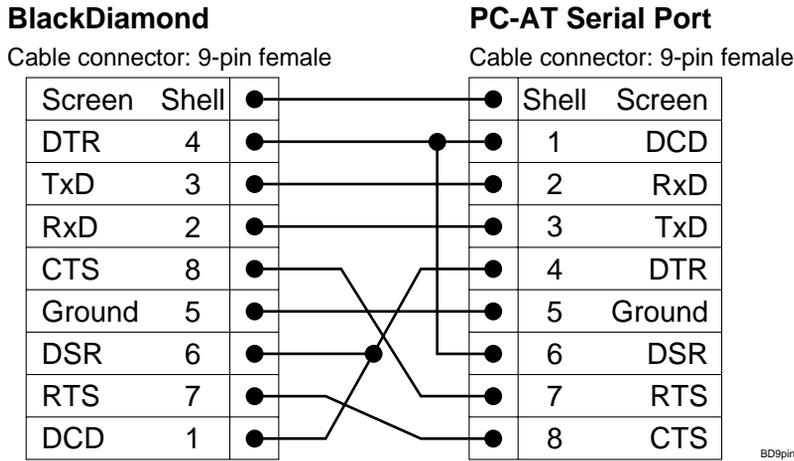


Figure 2-6: PC-AT serial null-modem cable pinouts

LOGGING IN FOR THE FIRST TIME

After the BlackDiamond has completed the POST, it is operational. Once operational, you can log in to the system and configure an IP address for the default VLAN (named *default*).

To manually configure the IP settings, perform the following steps:

- 1 Connect a terminal or workstation running terminal-emulation software to the MSM console port.
- 2 At your terminal, press [Return] one or more times until you see the login prompt.
- 3 At the login prompt, enter the default user name *admin* to log on with administrator privileges. For example:

```
login: admin
```

Administrator capabilities allow you to access all switch functions.



For more information on switch security, refer to the BlackDiamond User Guide.

- 4 At the password prompt, press [Return].

The default name, *admin*, has no password assigned. When you have successfully logged on to the system, the command-line prompt displays the system name (for example, `BlackDiamond6800>` in its prompt).

- 5 Assign an IP address and subnetwork mask for VLAN *default* by typing

```
config vlan default ipaddress 123.45.67.8 255.255.255.0
```

Your changes take effect immediately.

- 6 Save your configuration changes so that they will be in effect after the next system reboot, by typing

```
save
```

The configuration is saved to the configuration database of both MSMs.



For more information on saving configuration changes, refer to the BlackDiamond User Guide.

- 7 When you are finished using the facility, log out by typing

```
logout
```


3

Service and Maintenance

This chapter describes the following:

- How to remove and replace a module card
- How to remove and replace a power supply
- How to remove and replace the fan tray
- How to add and remove DIMMs on the MSM
- How to add and remove a GBIC

FOLLOWING SAFETY INFORMATION

All service to BlackDiamond modules, fan tray, and power supplies should be performed by trained service personnel, only.



Before installing or removing any components of the system, or before carrying out any maintenance procedures, you must read the safety information provided in [Appendix A](#) of this guide.

REMOVING AND REPLACING A MODULE CARD

All BlackDiamond module cards (MSMs and I/O modules) are hot-swappable. You do not need to power off the system to remove or insert a module card.

To remove and replace a module card, follow these steps:

- 1 Prior to installing module cards into the BlackDiamond chassis, put on the ESD wrist strap that is provided with the chassis, and connect the metal end to the ground receptacle located on the top-left corner of the BlackDiamond front panel.
- 2 Loosen the module card by unscrewing the screws using a #1 Phillips-head screwdriver.
- 3 Rotate the ejector/injector handles to disengage the module card from the backplane.
- 4 Slide the module card out of the chassis.
- 5 Slide the new module card into the appropriate slot of the chassis (Slots 1 through 8), until it is fully seated in the backplane.



If you are adding or replacing an MSM, ensure that the DIMM ejector locks are closed before sliding the MSM into the chassis.

- 6 When the module is fully seated in the chassis, the ejector/injector handles will begin to close.
- 7 To secure the module in the chassis, close the ejector/injector handles by pushing on them toward the center of the module card, and tighten the screws using a #1 Phillips-head screwdriver.



The I/O module can be installed in any of the slots labeled Slot 1 through Slot 8 only. The I/O module does not fit in Slot A or Slot B. The MSMs can be installed in Slot A and Slot B. Forceful insertion will damage the module or backplane connectors.

REMOVING AND REPLACING A POWER SUPPLY

BlackDiamond power supplies are hot-swappable. You can add a second power supply without powering off the chassis. If you have two power supplies installed, you can remove one of them without powering off the chassis.

To remove and replace a power supply, follow these steps:

- 1 Remove the power supply cord from the power supply and retention clip.
- 2 Unscrew the power supply using a #1 Phillips-head screwdriver.
- 3 Disengage the power supply by rotating the handle out and down.

The power supplies are shown in [Figure 3-1](#).

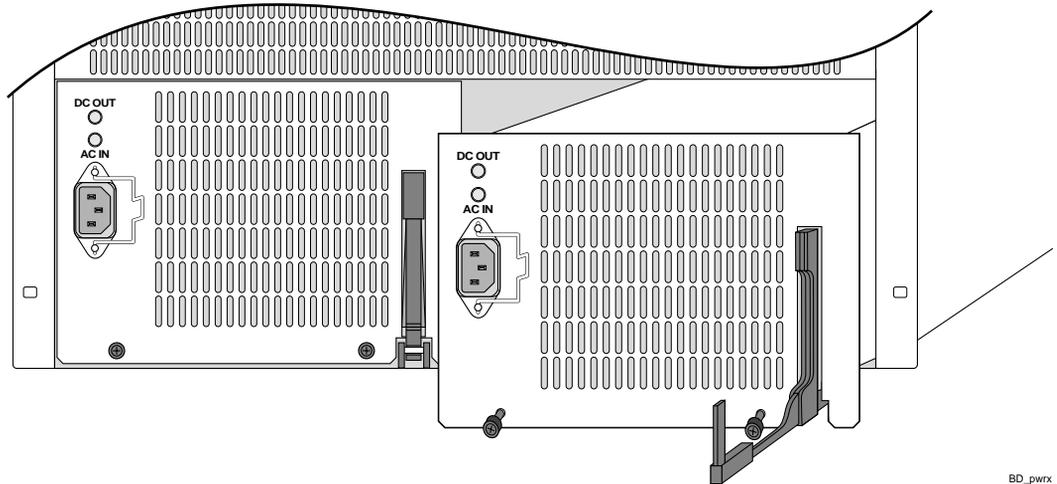


Figure 3-1: BlackDiamond power supplies

- 4 Slide the power supply out of the chassis.
- 5 Ensure that the replacement power supply is right-side up, and the locking handle is open.
- 6 Slide the power supply into the bay.
- 7 Secure the power supply by pushing down on the locking handle until it clicks in place, and then tighten the screws using a #1 Phillips-head screwdriver.

REMOVING AND REPLACING THE FAN TRAY

The BlackDiamond fan tray is hot-swappable. You do not need to turn off power to the BlackDiamond to replace the fan tray. Access to the fan tray is from the rear of the BlackDiamond chassis.

To remove and replace the fan tray, follow these steps:

- 1 Unscrew the ten screws securing the fan tray to the chassis, as shown in [Figure 3-2](#).

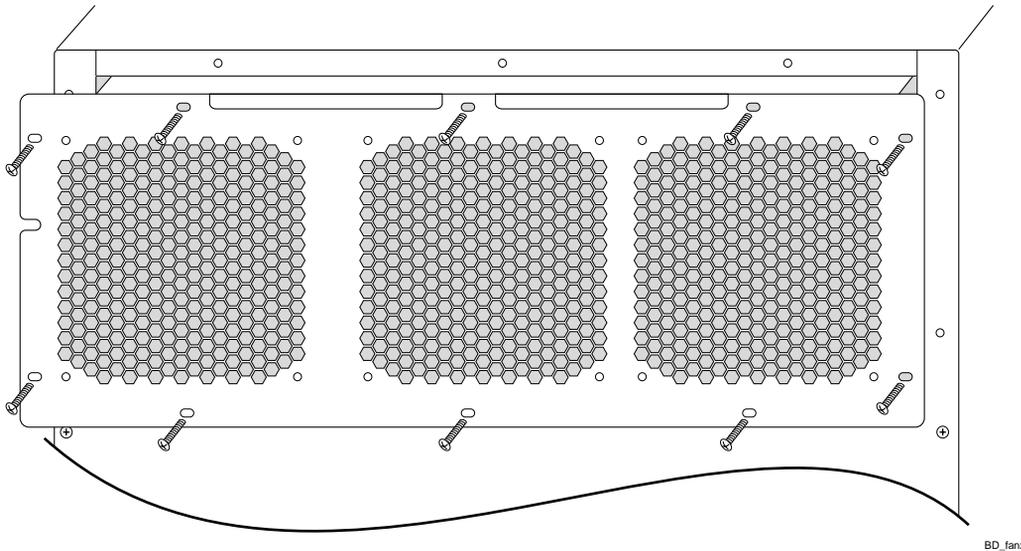


Figure 3-2: Removing the fan tray

- 2 Pull the fan tray straight back out of the chassis approximately $\frac{1}{2}$ inch; this step disconnects the power, causing the fans to stop.
- 3 Allow the fan blades to stop spinning before removing the fan tray completely.



Avoid personal injury. Keep hands away from rotating fan blades.

- 4 Insert the new fan tray into the bay.
- 5 Tighten the fan tray using the screws you removed in Step 1.

ADDING AND REMOVING DIMMS

To add a DIMM to the MSM, follow these steps:

- 1 Prior to removing or installing DIMMs on the MSM, put on the ESD wrist strap that is provided with the chassis, and connect the metal end to the ground receptacle located on the top-left corner of the BlackDiamond front panel.
- 2 Locate the DIMM sockets on the MSM.
- 3 Position the DIMM in the socket by ensuring that the gold fingers of the DIMM slip into the connector and the keying notches align.
- 4 Secure the DIMM by press down firmly until the DIMM is locked into the socket and the ejector locks rotate into position, as shown in [Figure 3-3](#).

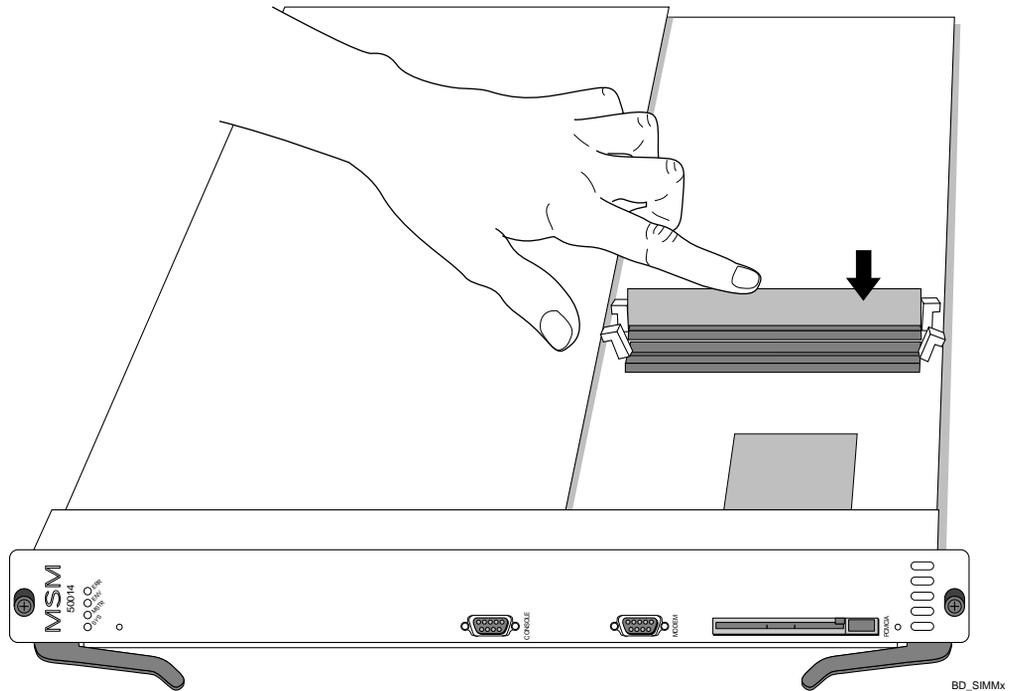


Figure 3-3: Adding a DIMM

To remove a DIMM, follow these steps:


- 1 Prior to removing or installing DIMMs on the MSM, put on the ESD wrist strap that is provided with the chassis, and connect the metal end to the ground receptacle located on the top-left corner of the BlackDiamond front panel.
- 2 Disengage the DIMM by pulling back on the ejector locks located on either end of the DIMM.
- 3 Pull the DIMM straight out of the socket.




Ensure the DIMM ejector locks are in the closed position prior to inserting the MSM into the chassis.

ADDING AND REMOVING GBICs

GBICs can be added and removed from the BlackDiamond without powering off the system. The two types of GBIC connectors are shown in [Figure 3-4](#).

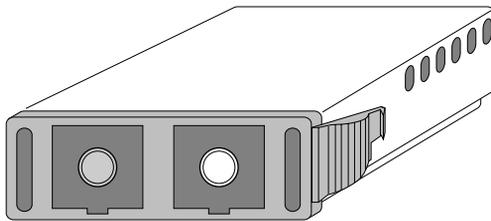

Connector A

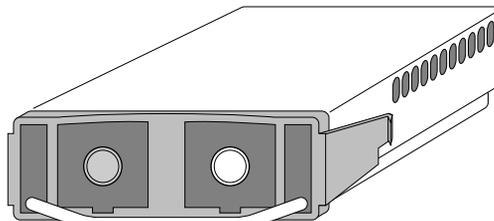

Connector B

BD_GBICs

Figure 3-4: GBIC connectors

GBICs are a Class 1 laser device. Use only Extreme-approved devices.

To remove the GBIC connector labeled “Connector A,” gently squeeze the sides to release it, and pull the GBIC out of the slot.

To remove the GBIC connector labeled “Connector B,” lift up on the front handle and pull the GBIC out of the slot.




Ensure that the SC fiber-optic connector is removed from the GBIC prior to removing the GBIC from the I/O module.



Invisible laser radiation can occur when open. Avoid direct eye exposure to beam.

To insert a GBIC connector, follow these steps:

- 1** Holding the GBIC by its sides, insert the GBIC into the slot on the I/O module.
- 2** Slide the GBIC as far back into the slot as possible, until you hear it click.
- 3** If the GBIC has a handle, push down on the handle to secure the GBIC in the slot.

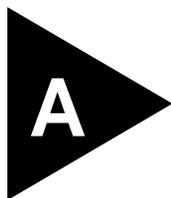

Safety Information

IMPORTANT SAFETY INFORMATION



READ THE FOLLOWING SAFETY INFORMATION THOROUGHLY BEFORE INSTALLING THE BLACKDIAMOND. FAILURE TO FOLLOW THIS SAFETY INFORMATION MAY LEAD TO PERSONAL INJURY OR DAMAGE TO THE EQUIPMENT.

- Installation, maintenance, removal of parts, and removal of the unit and components must be done by qualified service personnel only.

Service personnel are persons having appropriate technical training and experience necessary to be aware of the hazards to which they are exposed in performing a task and of measures to minimize the danger to themselves or other persons.

- Install the unit only in a temperature- and humidity-controlled indoor area free of airborne materials that may conduct electricity. Too much humidity may cause a fire. Too much dryness may produce electrical shock and fire.

POWER



This unit has two power inputs.

- Disconnect power before removing the back panel of the unit.
- The unit must be grounded.
- The unit must be connected to a grounded outlet to comply with European safety standards.
- Do not connect the power supply unit to an A/C outlet without a ground connection.
- The socket outlet must be near to the unit and easily accessible. You can only remove power from the unit by disconnecting the power cord from the outlet.
- This unit operates under Safety Extra Low Voltage (SELV) conditions according to IEC 950. The conditions are only maintained if the equipment to which it is connected also operates under SELV conditions.
- The appliance coupler (the connector to the unit and not the wall plug) must have a configuration for mating with an EN60320/IEC320 appliance inlet.
- *France and Peru only*
This unit cannot be powered from IT† supplies. If your supplies are of IT type, this unit must be powered by 230V (2P+T) via an isolation transformer ratio 1:1, with the secondary connection point labeled Neutral, connected directly to ground.

POWER CORD

- This must be approved for the country where it is used:

USA and Canada	<ul style="list-style-type: none"> • The cord set must be UL-approved and CSA-certified. • The minimum specification for the flexible cord is No. 16 AWG (1.5 mm²), Type SV or SJ, 3-conductor. • The cord set must have a rated current capacity of at least 10A. • The attachment plug must be an Earth-grounding type with a NEMA L6-20P (20A, 250V) configuration.
-------------------	---

- Denmark
 - The supply plug must comply with section 107-2-D1, standard DK2-1a or DK2-5a.
- Switzerland
 - The supply plug must comply with SEV/ASE 1011.
- If the power cord plug is unsuitable and must be replaced, you may find other codings for the respective connections. Connect the power supply wires for the unit according to the following scheme:
 - Brown wire to the Live (Line) plug terminal, which may be marked with the letter “L” or colored red.
 - Blue wire to the Neutral plug terminal, which may be marked with the letter “N” or colored black.
 - Yellow/Green wire to the Ground plug terminal, which may be marked with the letter “E” or the Earth symbol \perp or colored yellow/green.

CONNECTIONS

- **Fiber Optic ports - Optical Safety.** Never look at the transmit LED/laser through a magnifying device while it is powered on. Never look directly at the fiber TX port and fiber cable ends when they are powered on.
- CLASS 1 LASER DEVICE

LITHIUM BATTERY


- The battery in the bq4830/DS1644 device is encapsulated and not user-replaceable. The battery is located on the MSM motherboard.
- If service personnel disregard the instructions and attempt to replace the bq4830/DS1644, replace the lithium battery with the same or equivalent type, as recommended by the manufacturer.



Caution: There is danger of personal injury and explosion if battery is improperly discarded. Do not discard the battery in fire or near heat. Always dispose of used batteries according to the battery manufacturer's instructions.

- Disposal requirements vary by country and by state.
- Lithium batteries are not listed by the Environmental Protection Agency (EPA) as a hazardous waste. Therefore, they can typically be disposed of as normal waste.

- If you are disposing of large quantities, contact a local waste-management service.
- No hazardous compounds are used within the battery module.
- The weight of the lithium contained in each coin cell is approximately 0.035 grams.
- Two types of batteries are used interchangeably:
 - CR chemistry uses manganese dioxide as the cathode material.
 - BR chemistry uses poly-carbonmonofluoride as the cathode material.

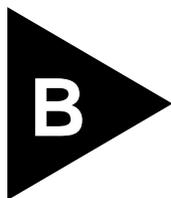


Technical Specifications

Physical Dimensions	Height 26.25 inches x Width: 17.32 inches x Depth: 18 inches
Weight — Empty chassis	60 pounds
Weight — Fully loaded chassis	170 pounds
Weight — Each power supply	30 pounds
Weight — Each module card	5 pounds

Environmental Requirements	
Operating Temperature	0° to 40° C
Storage Temperature	-10° to 70° C
Operating Humidity	10% to 95% relative humidity, noncondensing
Standards	EN60068 (IEC68)

Safety	
Agency Certifications	UL 1950 3rd Edition, listed cUL listed to CSA 22.2#950-95 TUV GS mark & GOST safety approval to the following EN standards: <ul style="list-style-type: none">■ EN60950:1992/A3:1995 plus ZB/ZC Deviations■ EN60825-1

Electromagnetic Compatibility	FCC part 15 Class A ICES-0003 A VCCI Class 1 EN55022 Class A EN50082 -1 (1997) C-Tick mark to AS/NZS 3548:1995 Class A
Heat Dissipation	1225W maximum (4185 BTU/hr maximum)
Power Supply	
AC Line Frequency	47Hz to 63Hz
Input Voltage Options	180 VAC to 264 VAC, auto-ranging
Current Rating	200-240 VAC 10 A

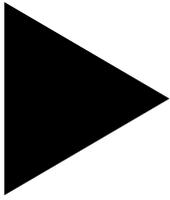

Index

A

air-flow requirements 2-2

B

BlackDiamond

- air-flow requirements 2-2
- components 1-6
- configuration example 1-4
- console port 1-9
- dimensions B-1
- features 1-1
- I/O modules 1-12
- installing 2-2
- MAC address 1-16
- media distances, supported 1-3
- media types, supported 1-3
- MSM, description 1-9
- port connections 1-2
- power supply 1-8
- powering on 2-7
- rear view 1-16
- serial number 1-16
- size B-1

C

- cable types and distances 1-3
- chassis rear view 1-16
- components 1-6
- configuration example 1-4
- configuring IP settings 2-10

- console port 1-9
 - connecting equipment to 2-8
 - settings 2-8
- conventions
 - notice icons x
 - text x

D

- DIMMs
 - description 1-10
 - installing and removing 3-5

F

- F32F module 1-3, 1-15
- F32T module 1-3, 1-14
- fan tray
 - installing 3-4
 - removing 3-4
- features 1-1
- full-duplex 1-4

G

- G4X module 1-2, 1-13
- G6X module 1-2, 1-13
- GBICs, installing and removing 3-6

H

- helper bracket, installing 2-2

I

- I/O modules
 - description 1-12
 - hot-swapping 1-12
 - installing 2-7, 3-2
 - LEDs 1-16
 - removing 3-2
- installation
 - chassis 2-2
 - DIMMs 3-5
 - fan tray 3-4
 - GBICs 3-6
 - helper bracket 2-2
 - I/O modules 2-7, 3-2
 - MSM 2-5, 3-2
 - power supply 2-4, 3-3
 - rack-mounting 2-2
- installing the system 2-2
- IP settings, configuring 2-10

L

- LEDs
 - I/O modules 1-16
 - MSM 1-12
 - power supply 1-8
- logging in 2-10

M

- MAC address 1-16
- Management Switch Fabric Module. *See* MSM
- media types and distances 1-3
- memory, MSM 1-10
- MSM
 - booting 1-10
 - console port 1-9
 - console port settings 2-8
 - description 1-9
 - installing 2-5, 3-2
 - installing DIMMs 3-5
 - LEDs 1-12
 - master, slave functionality 1-10
 - memory 1-10
 - ports 1-9
 - removing 3-2
 - removing DIMMs 3-5
 - saving configuration 1-10

P

- ports
 - connections 1-2
 - console port settings 2-8
 - installing and removing GBICs 3-6
 - MSM 1-9
- power supply
 - installing 2-4, 3-3
 - LEDs 1-8
 - removing 3-3
 - voltage 1-8
- powering on 2-7
- power-on self test (POST) 2-7

R

- rack-mounting 2-2
- related publications xi

S

- safety information
 - English A-1
- saving configuration 1-10
- serial number 1-16

T

- turning on 2-7

V

- verifying the installation 2-7