



# READ ME FIRST

---

## **READ ME FIRST Before Installing Your A6150B Graphics Card**

If you ordered this A6150B graphics card kit for installation into a hp 9000 rp4440 Server, you need only install the graphics card to activate graphics capability. DO NOT install the USB card; it is NOT supported. USB capability is already incorporated into your hp 9000 rp4440 Server and the USB ports are located on the rear panel.

### **HP Server Documentation**

For complete instructions on installing PCI cards into your HP Server, see the *Operation and Maintenance Guide* on the *Documentation CD* that was included with your HP Server. For online documentation, go to:

<http://docs.hp.com>



